


AMAZING QUIK-STIK™

BOAT COVER SUPPORT SYSTEM

Installs Perfectly in Minutes!


QUIK-STIK™ COMPONENTS LIST

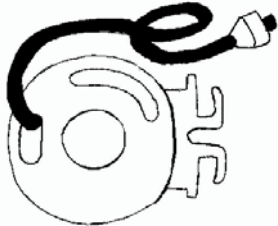

COLLAR ASSEMBLY (1)



CONNECTORS (2)

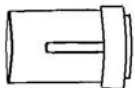

END CAP (1)



POLE TIP (1)



RUBBER SEAL (1)



18"
TUBE
(3)

QUIK-STIK™ ASSEMBLY STEPS

STEP 1 – WITH BOAT COVER INSTALLED, IDENTIFY THE LOCATION ON THE COVER THAT IS MOST SUBJECT TO POOLING AND MARK WITH AN "X". BE SURE THE LOCATION IS ABOVE AN UNOBSTRUCTED AREA ON THE DECK OF THE BOAT.

STEP 2 – REMOVE THE COVER AND CUT THE "X" IN THE CANVAS NO LONGER THAN 1" USING SHARP SCISSORS.

STEP 3 – REMOVE THE THREE SCREWS IN THE COLLAR ASSEMBLY SEPARATING THE TOP COLLAR (ROPE SIDE) FROM THE BOTTOM COLLAR. PLACE THE SHAFT OF THE TOP COLLAR THROUGH THE CUT "X" IN THE CANVAS. POSITION THE CLEAT FACING THE FRONT OF THE BOAT COVER IF INSTALLING POLE IN THE BOW AREA. POSITION THE CLEAT FACING THE REAR OF THE BOAT COVER IF INSTALLING POLE IN THE COCKPIT OR REAR AREA OF THE BOAT.

STEP 4 – FROM THE UNDERSIDE OF THE COVER, SLIDE THE BOTTOM COLLAR ONTO THE SHAFT OF THE TOP COLLAR AND ROTATE SLIGHTLY UNTIL THE TOP AND BOTTOM KEYS AND KEYWAYS ALIGN. WITH THE CANVAS BETWEEN THE COLLARS, PUSH THE COLLARS TOGETHER AND RE-INSTALL THE THREE SCREWS.

STEP 5 – DETERMINE THE HEIGHT OF THE POLE FOR YOUR BOAT BY INSTALLING THE COVER AND RAISING THE CANVAS AT THE COLLAR LOCATION UNTIL TAUGHT. MEASURE THE DISTANCE BETWEEN THE RAISED COLLAR LOCATION AND THE BOAT DECK WHERE THE BOTTOM OF THE POLE WILL REST. ADD A MINIMUM OF 3" BUT NO MORE THAN 9" TO THIS MEASUREMENT.

STEP 6 – USING THE CONNECTORS, JOIN THE APPROPRIATE NUMBER OF TUBES TO ACHIEVE THE MAXIMUM MEASUREMENT. THE CONNECTORS ARE EASILY INSTALLED BY TAPPING WITH A Mallet OR BLOCK OF WOOD. IF THE RESULTING POLE EXCEEDS THE MAXIMUM MEASUREMENT, CUT DOWN ONE END USING A HACKSAW.

STEP 7 – SLIDE THE RUBBER SEAL OVER THE TOP END OF THE POLE WITH TAPERED SIDE FACING DOWN. INSERT THE POLE TIP INTO THE TOP END OF THE POLE AND SLIDE THE RUBBER SEAL UP TO REST AGAINST THE POLE TIP.

STEP 8 – RE-CHECK THE POLE LENGTH TO THE TAUGHTLY RAISED BOAT COVER TO CONFIRM THE POLE HEIGHT. IF CORRECT, TAP THE END CAP INTO THE BOTTOM END OF THE POLE.

STEP 9 – INSERT THE COMPLETED POLE THROUGH THE COLLAR ASSEMBLY AND ALLOW TO REST ON THE BOAT DECK. PULL THE ROPE OVER THE POLE TIP AND SNAP INTO SLOT. PULL ROPE DOWN TOWARD THE CLEAT ON THE COLLAR ASSEMBLY. THE BOAT COVER WILL BEGIN TO RISE.

STEP 10 – INSERT ROPE INTO THE CENTER SLOT OF THE CLEAT PULLING UNTIL TIGHT AND THE BOAT COVER TAUGHT. TIE THE ROPE OFF ONTO THE CLEAT WRAPPING ONCE OR TWICE AROUND THE OUTSIDE SLOTS OF THE CLEAT.

ALWAYS USE CAUTION WHEN RAISING THE POLE OVER YOUR HEAD. BE AWARE OF POWER LINES AND AVOID HANDLING POLE DURING LIGHTNING.

QUIK-STIK™ TOOLS

To assemble your QUIK-STIK™ you will need the following tools:

- Phillips Screwdriver
- Mallet
- Scissors



QUIK TIPS

TO RAISE THE BOAT COVER WITH LESS EFFORT, PULL CORD DOWN THROUGH CENTER SLOT OF CLEAT THEN DIRECTLY TOWARD YOU.

WHEN POLE IS NOT IN USE, THE RUBBER PLUG ON THE END OF THE ROPE IS DESIGNED TO PLUG THE TOP OF THE COLLAR. SIMPLY SLIDE THE PLUG TO THE END OF THE ROPE, INSERT THE ROPE INTO THE COLLAR AND INSERT PLUG. TO REMOVE THE PLUG, PULL ON ROPE.